


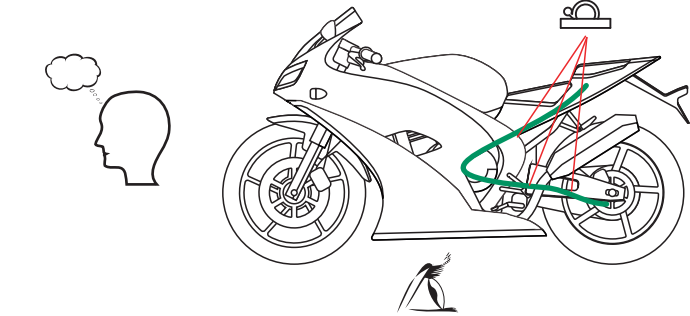
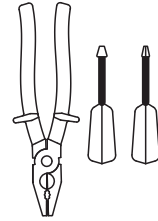
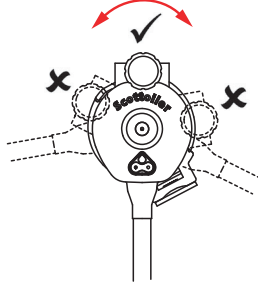
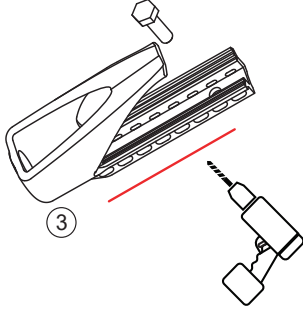
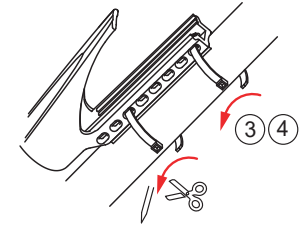
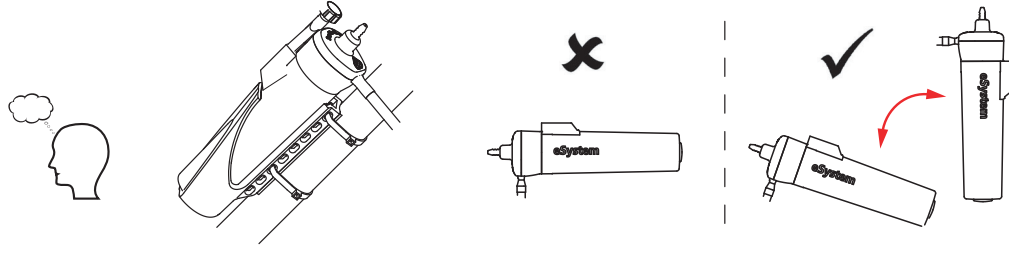


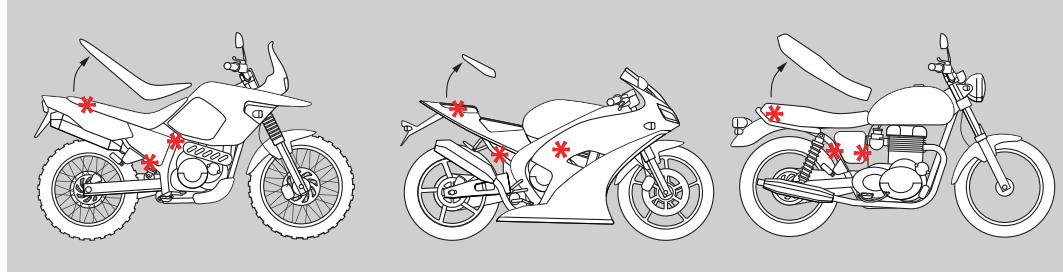

EN: FRAME MUST BE OIL FREE
 DE: RAHMEN MUSS ÖLFREI SEIN
 FR: CADRE DOIT ETRE EXEMPT D'HUILE
 ES: NO DEBE HABER ACEITE EN EL BASTIDOR
 IT: CORNICE DEVE ESSERE ESENTE DA OLIO
 NL: HET FRAME MOET OLIEVRIJ ZIJN

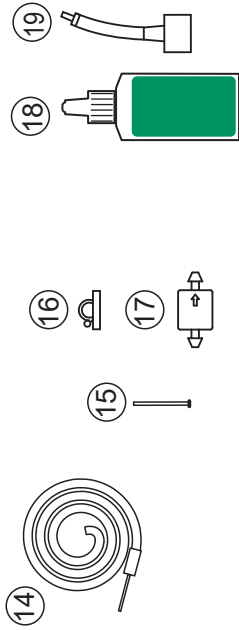

Tools Required

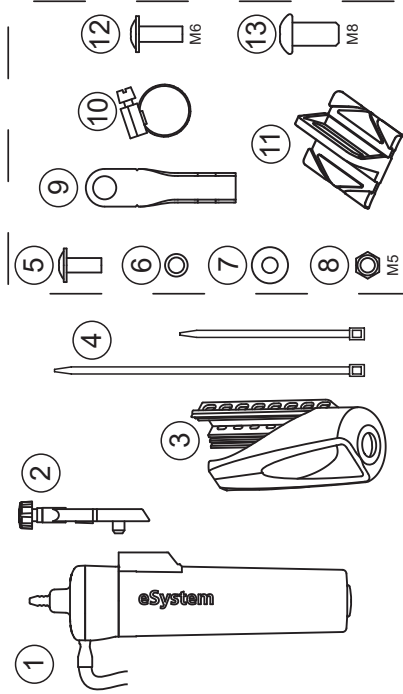

REpConnect
 PLUG-IN **eSYSTEM**
 INTEGRATED CHAIN OILER
 SYSTEM FOR INTELLIGENT
 ACCESSORY MANAGERS

www.scottoiler.com



register your product
www.scottoiler.com/warranty




installation videos
reconnect.scottoiler.com





installation guides
www.scottoiler.com/mybike




tips
www.scottoiler.com/tips

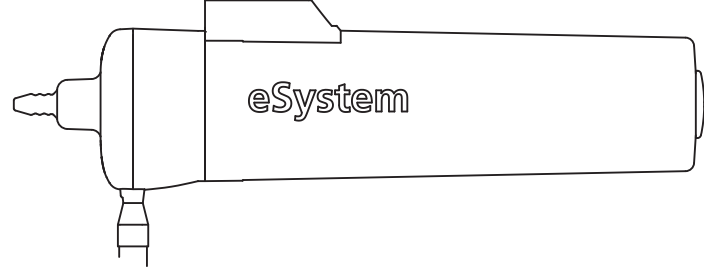

3A

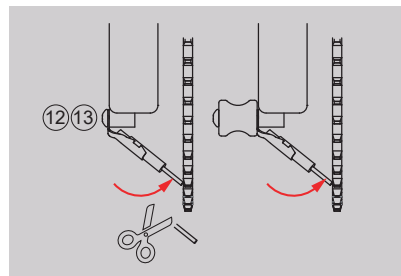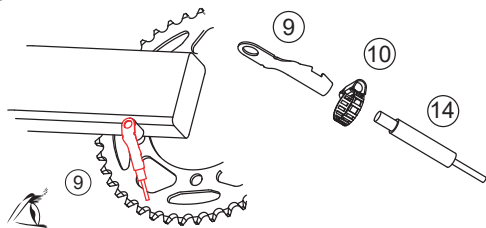


3B

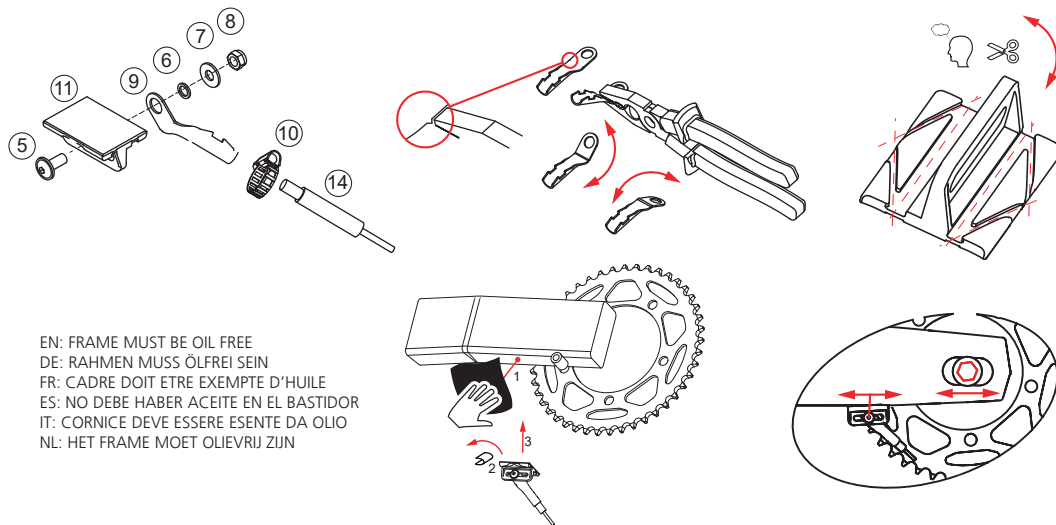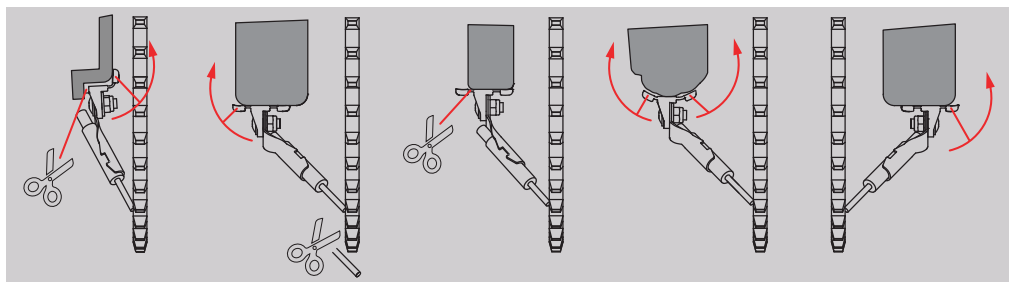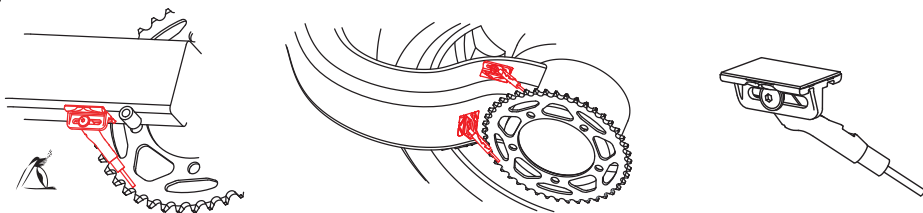


EN: FRAME MUST BE OIL FREE
 DE: RAHMEN MUSS ÖLFREI SEIN
 FR: CADRE DOIT ETRE EXEMPT D'HUILE
 ES: NO DEBE HABER ACEITE EN EL BASTIDOR
 IT: CORNICE DEVE ESSERE ESENTE DA OLIO
 NL: HET FRAME MOET OLIEVRIJ ZIJN

4

USE ONLY
 SCOTTOILER
 REFILL OIL

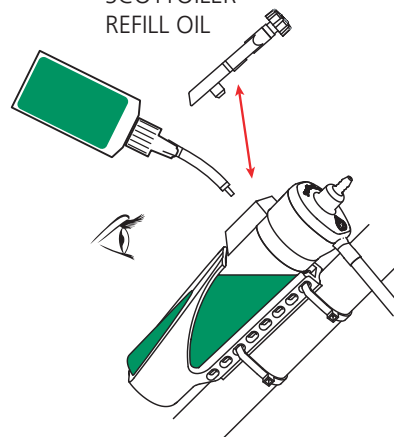

5

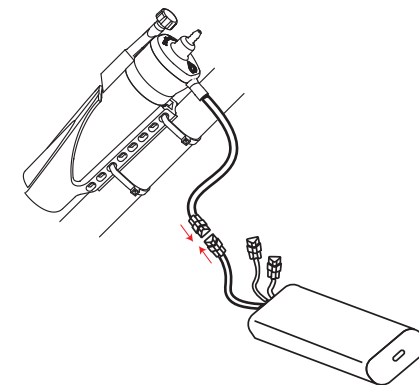

EN: INITIAL SETUP
 DE: ESYSTEM EINRICHTEN
 FR: LA CONFIGURATION INITIALE
 ES: CONFIGURACIÓN INICIAL
 IT: CONFIGURAZIONE INIZIALE

6

① Set fuse to 1 Amp

Start prime

Use the PRIME mode to continuously activate the pump. The ignition needs to be turned on to prime.

Flow rate

Flowrate can be set according to your preference. Default is 1 drop every 90 seconds.

Enable oiling

You can completely disable oiling when required.



Scan QR code for
 product information
 installation instructions

You can find more
 information and installation
 and setup videos on
reconnect.scottoiler.com

7

